


Brian May Treble Boost

Beavis Audio's lovely take on the treble booster


Contents of this document are ©2026 Pedal Parts Ltd.
No reproduction permitted without the express written permission of Pedal Parts Ltd. All rights reserved.

Before you dig in, ensure you download and read the **General Build Guide**.

It contains all the information you need for a successful outcome.

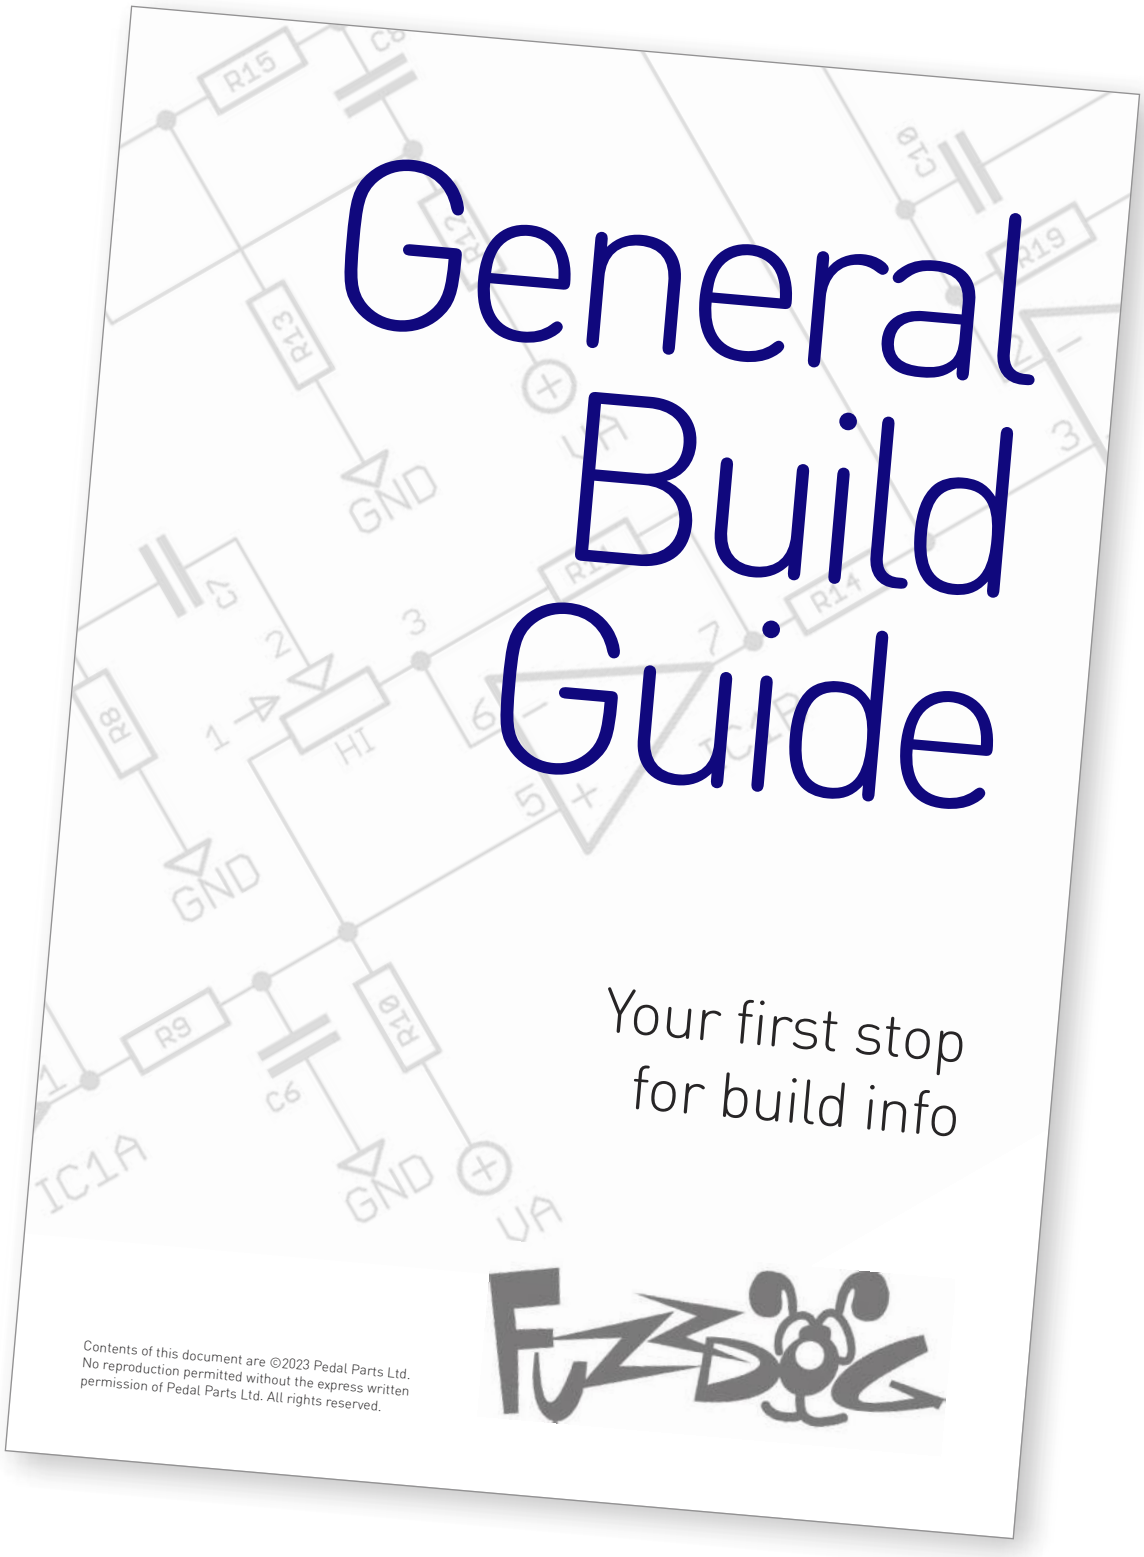


Schematic + BOM

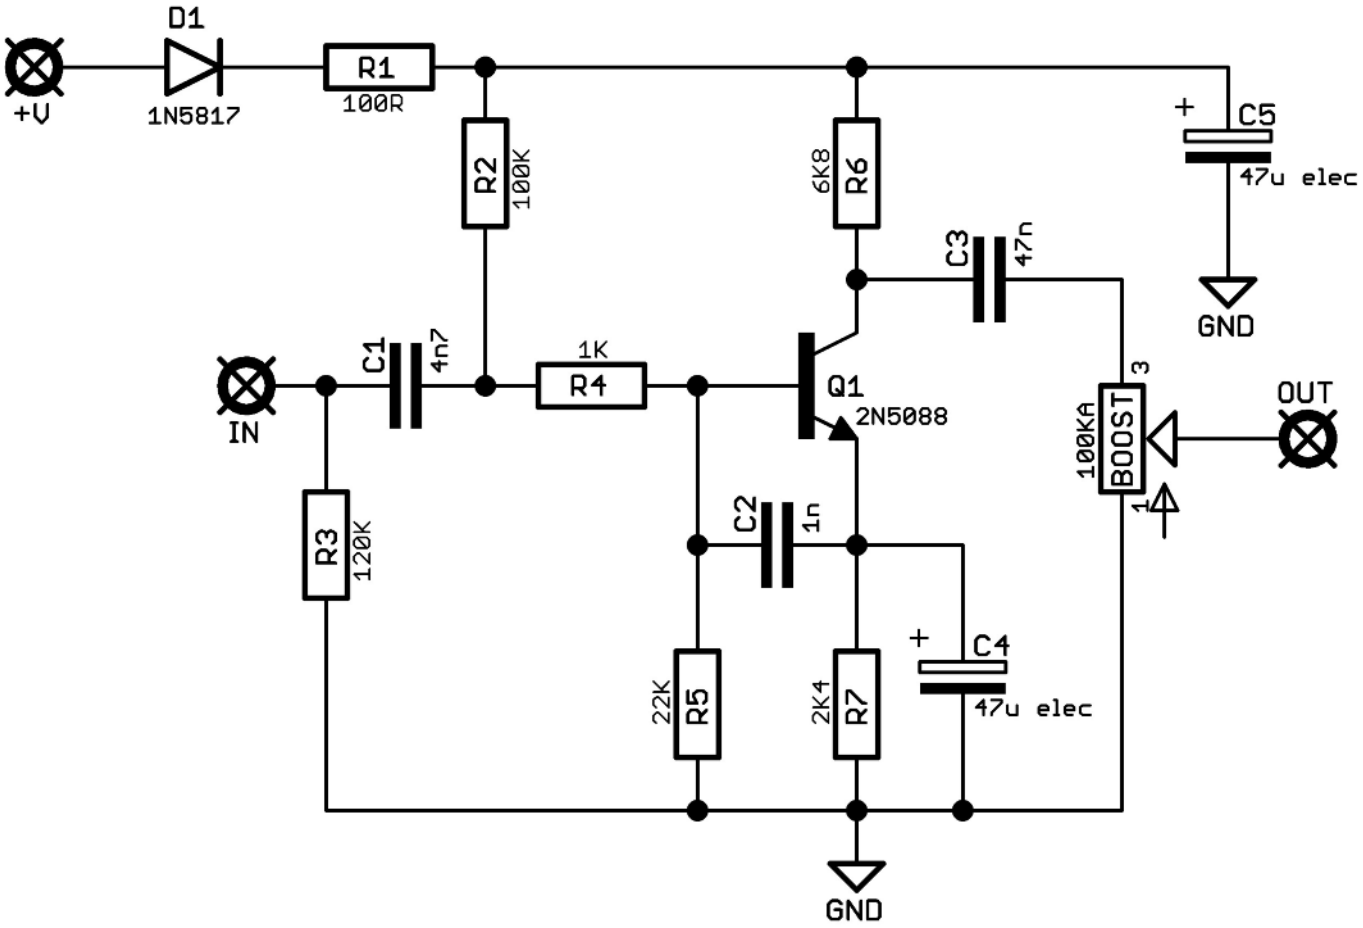

R1	100R	C1	4n7	D1	1N5817
R2	100K	C2	1n		
R3	120K	C3	47n	Q1	2N5088
R4	1K	C4	47u elec		
R5	22K	C5	47u elec	BOOST	100KA
R6	6K8				
R7	2K4				

PCB layout ©2025 Pedal Parts Ltd.

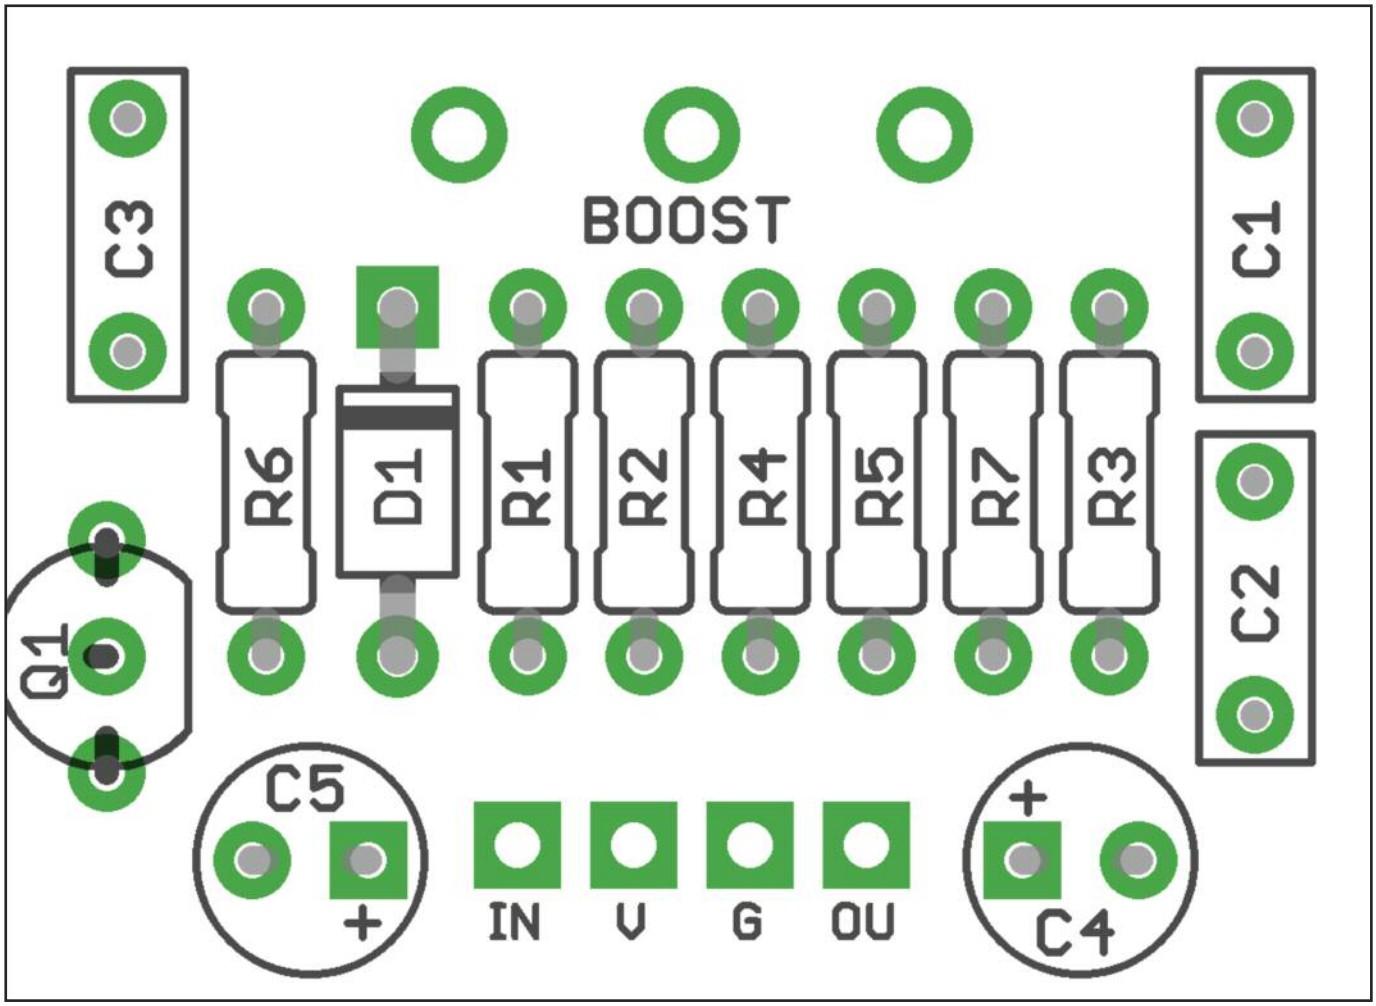

Snap the small metal tag off the pot so it can be mounted flush in the box.

You should solder all other board-mounted components before you solder the pot.

Once it's in place you'll have no access to much of the board.


Drilling template

Hammond 1590B - 60 x 111 x 31mm

Drill sizes listed are minimum.
It's a good idea to add 1mm to anything mounted on the PCB that'll poke through the front of the enclosure.

Drill sizes:

Pots	7mm
Jacks	10mm
Footswitch	12mm
DC Socket	12mm
Toggle switches	6mm
Rotary switches	10mm

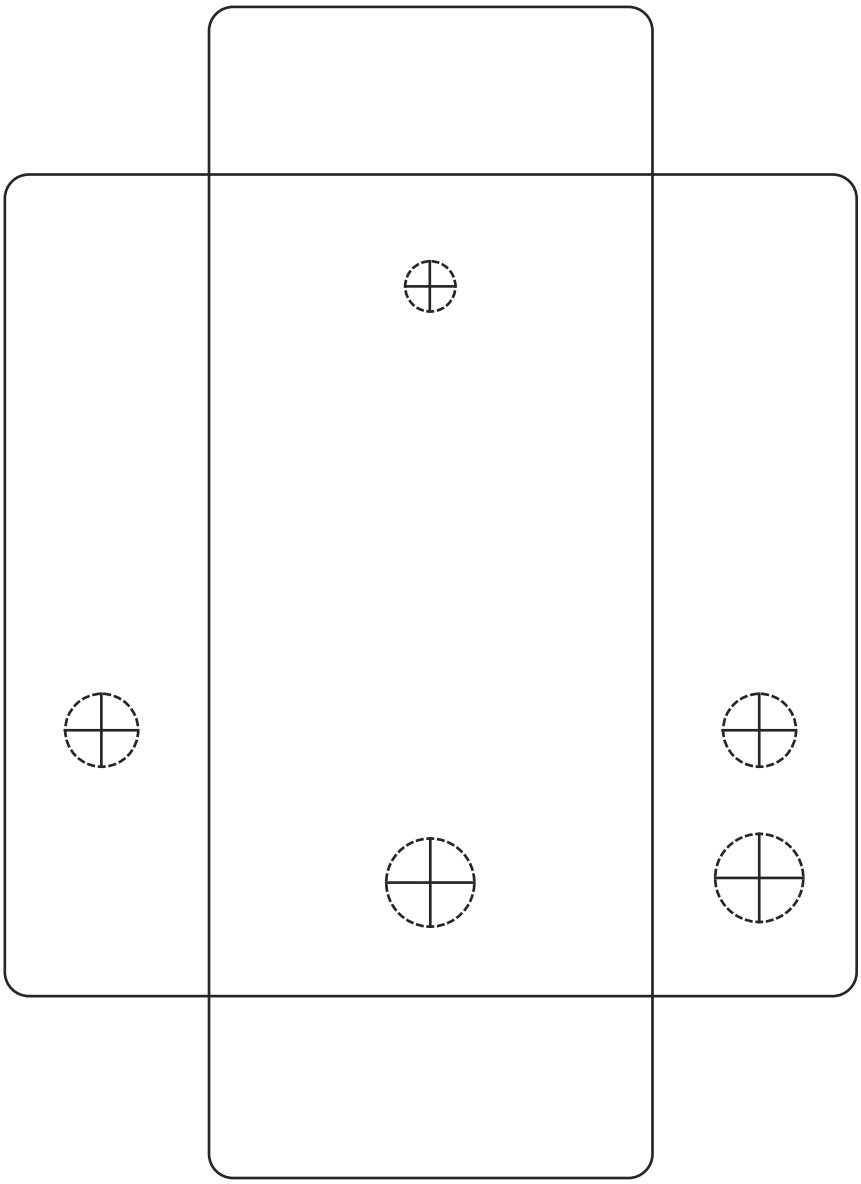

This template is a rough guide only. You should ensure correct marking of your enclosure before drilling. You use this template at your own risk.
Pedal Parts Ltd can accept no responsibility for incorrect drilling of enclosures.

FuzzDog.co.uk