


Mutant Fuzz

Regulus VIII Fuzz with mods

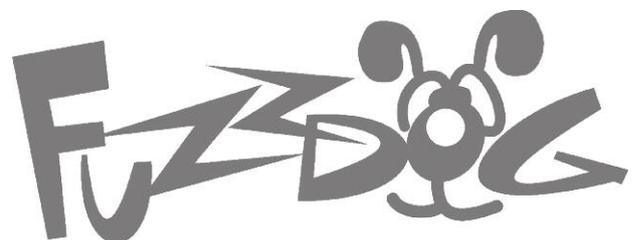

Important notes

If you're using any of our footswitch daughterboards, DOWNLOAD THE DAUGHTERBOARD DOCUMENT

- Download and read the appropriate build document for the daughterboard as well as this one BEFORE you start.
- DO NOT solder the supplied Current Limiting Resistor (CLR) to the main circuit board even if there is a place for it. This should be soldered to the footswitch daughterboard.

POWER SUPPLY

Unless otherwise stated in this document this circuit is designed to be powered with 9V DC.

COMPONENT SPECS

Unless otherwise stated in this document:


- Resistors should be 0.25W. You can use those with higher ratings but check the physical size of them.
- Electrolytics caps should be at least 25V for 9V circuits, 35V for 18V circuits. Again, check physical size if using higher ratings.

LAYOUT CONVENTIONS

Unless otherwise stated in this document, the following are used:

- **Electrolytic capacitors:**
Long leg (anode) to square pad.
- **Diodes/LEDs:**
Striped leg (cathode) to square pad. Short leg to square pad for LEDs.
- **ICs:**
Square pad indicates pin 1.

Schematic

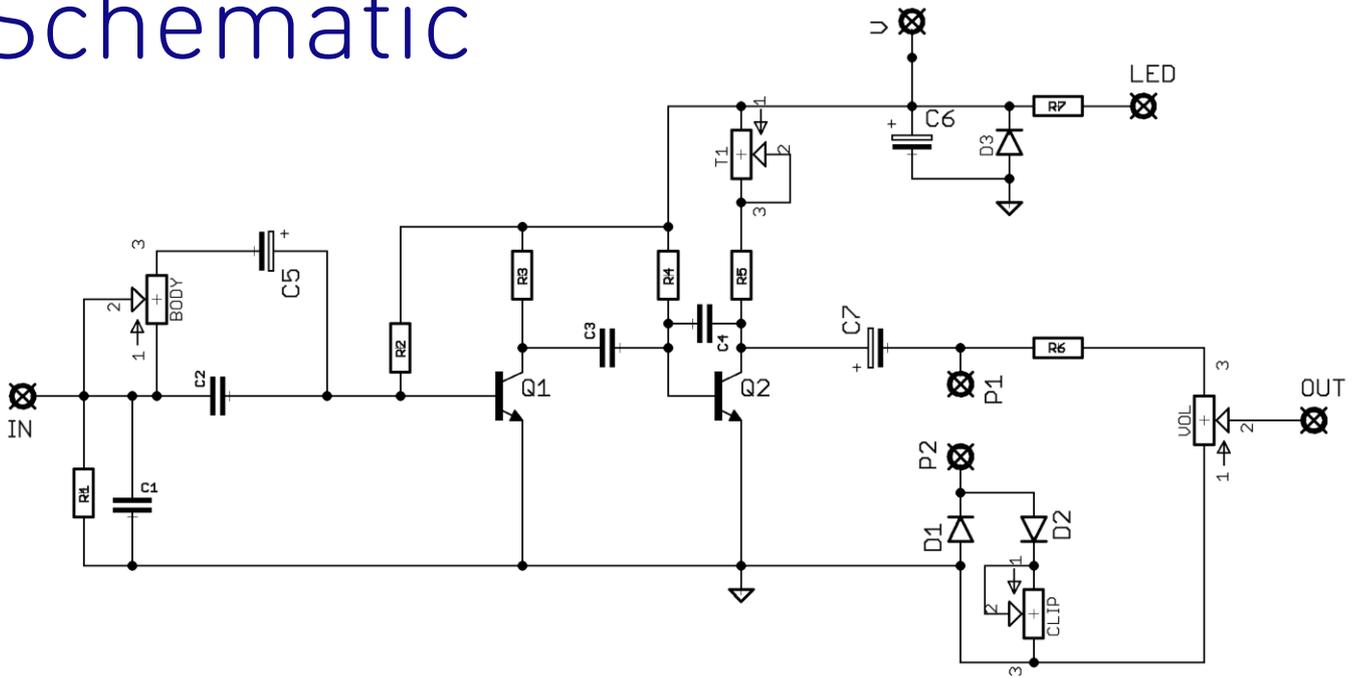

BOM

R1	2M2	C1	47p	Q1-2	BC109*
R2	3M3	C2	4n7	D1-2	1N4148
R3	2K2	C3	100n	D2	1N4001
R4	1M	C4	470p	BODY**	100KA
R5	1K	C5	10u elec	VOL	100KB
R6	22K	C6	47u elec	CLIP**	5KB
R7	2K2 (CLR)	C7	2u2 elec		
		T1	4K7 Trim		

*Other NPN transistors can be used. Experiment. 2N3904 and 2N3565 work well.

**BODY and CLIP are optional. If you prefer to keep to the original do the following:

TO OMIT BODY

- Leave out C5
- Leave out BODY pot


TO OMIT CLIP

- Leave out CLIP pot and place a jumper between pads 2 and 3

There are extra pads marked 1 and 2. These enable you to take the clipping diodes out of the circuit altogether. To do that add a SPST or SPDT toggle switch. Connect one pad to the centre lug, the other to either of the outer lugs (or the single outer lug if using SPST).

If you aren't adding the switch, jumper pads 1 and 2 together.

Use the trimmer T1 to dial in the sweet spot. There's no precise voltage to aim for - just adjust until it sounds awesome.

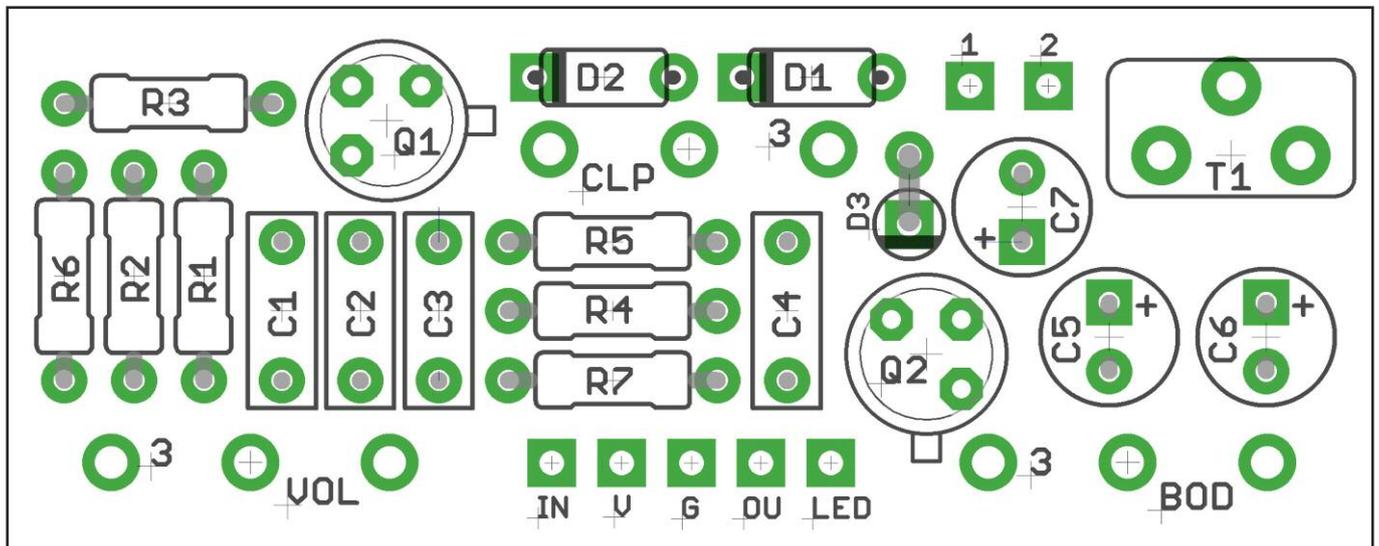

The power and signal pads on the PCB conform to the FuzzDog Direct Connection format, so can be paired with the appropriate daughterboard for quick and easy offboard wiring.

Be very careful when soldering the diodes, LED and transistors. They're very sensitive to heat. You should use some kind of heat sink (crocodile clip or reverse action tweezers) on each leg as you solder them. Keep exposure to heat to a minimum (under 2 seconds).

The striped leg (cathode) of the diodes go into the square pads.


The long leg (anode) of the electrolytic capacitors go into the square pads.

Snap the small metal tag off the pots so they can be mounted flush in the box.

Pot mounts on the back side of the board. You can use vertical-mount pots or just wire up 'normal' ones. It's a good idea to place the pots in their holes in the enclosure when you're soldering them in place on the PCB. That way you know they're going to line up ok. Best way to do it is to solder a single pin of each pot in place, then do a visual check to see that they're all sitting at the same height. If not, melt the joints and readjust any that are off.

If your pots don't have protective plastic covers you should place a strip of thick card between them and the board when soldering to keep them a good distance from the pcb to avoid shorting other components.

You should solder all other board-mounted components before you solder the pots. Once they're in place you'll have no access to much of the underside of the board.

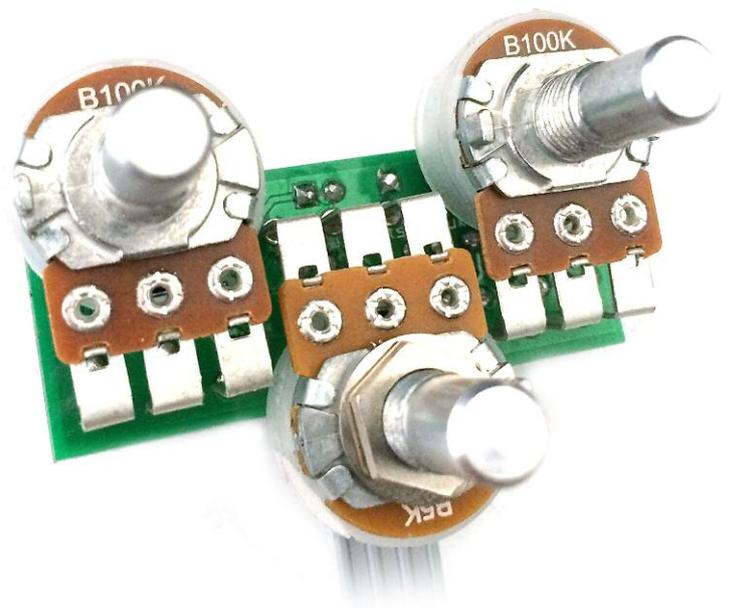

Test the board!

Check the relevant daughterboard document for more info before you undertake this stage.


UNDER NO CIRCUMSTANCES will troubleshooting help be offered if you have skipped this stage. No exceptions.

Once you've finished the circuit it makes sense to test it before starting on the switch and LED wiring. It'll cut down troubleshooting time in the long run. If the circuit works at this stage, but it doesn't once you wire up the switch - guess what? You've probably made a mistake with the switch.

Solder some nice, long lengths of wire to the board connections for 9V, GND, IN and OUT. Connect IN and OUT to the jacks as shown. Connect all the GNDs together (twist them up and add a small amount of solder to tack it). Connect the battery + lead to the 9V wire, same method. Plug in. Go!


If you're using a ribbon cable you can tack the wires to the ends of that. It's a lot easier to take them off there than it is to desolder wires from the PCB pads.

If it works, carry on and do your switch wiring. If not... aw man. At least you know the problem is with the circuit. Find out why, get it working, THEN worry about the switch etc.

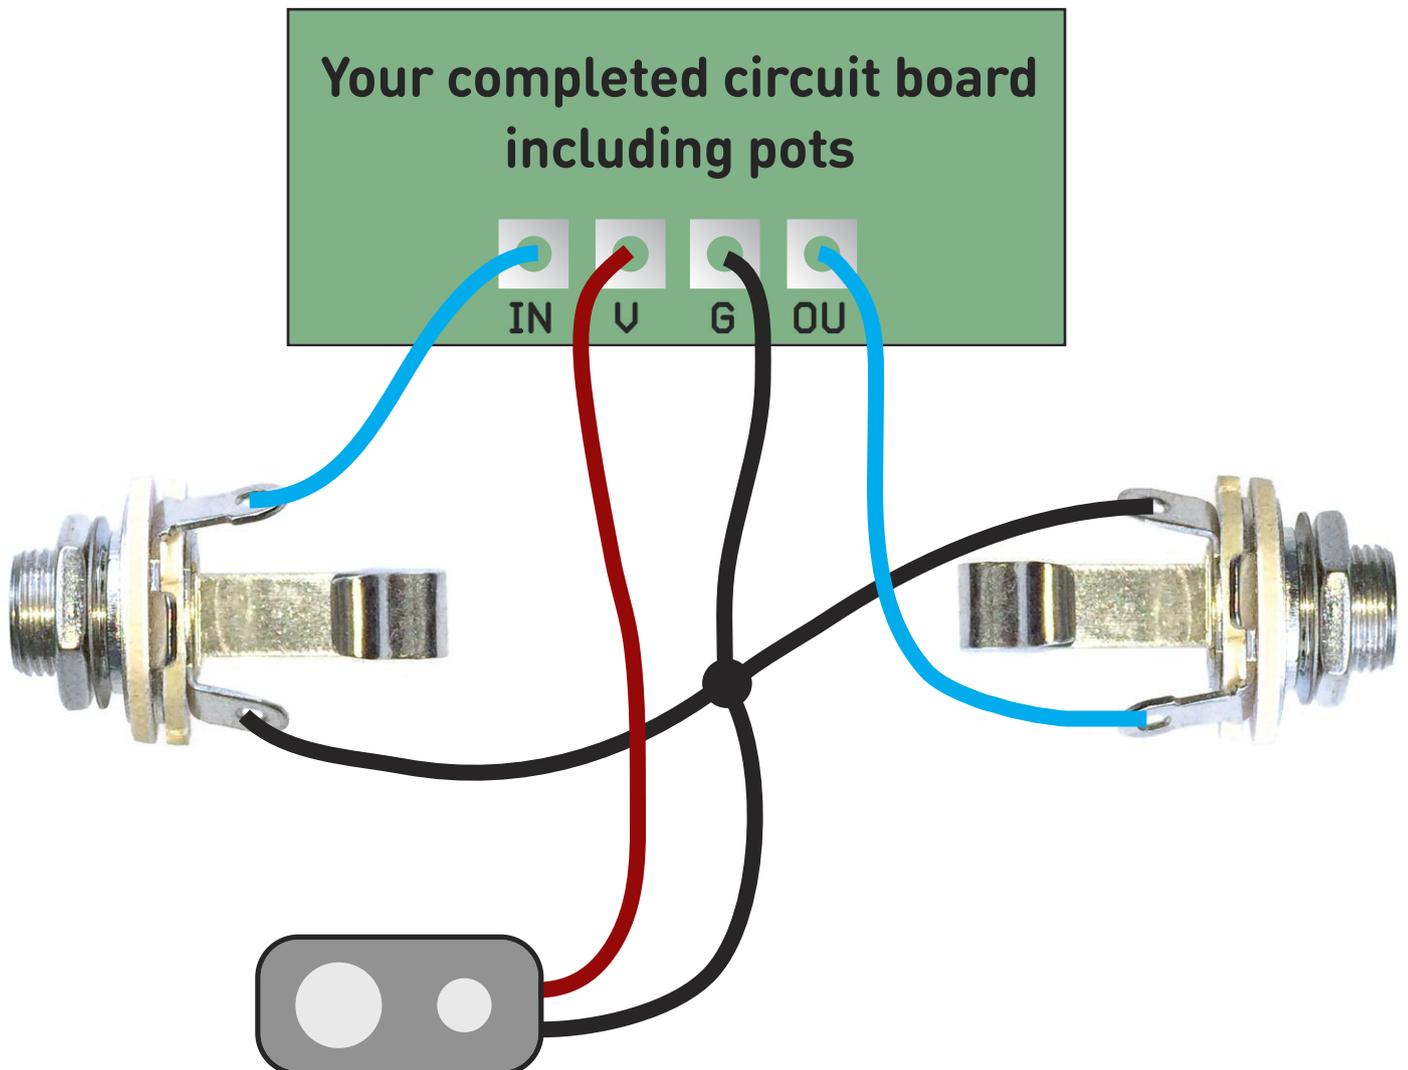

Wire it up - DC only version

(if using a daughterboard please refer to the relevant document)

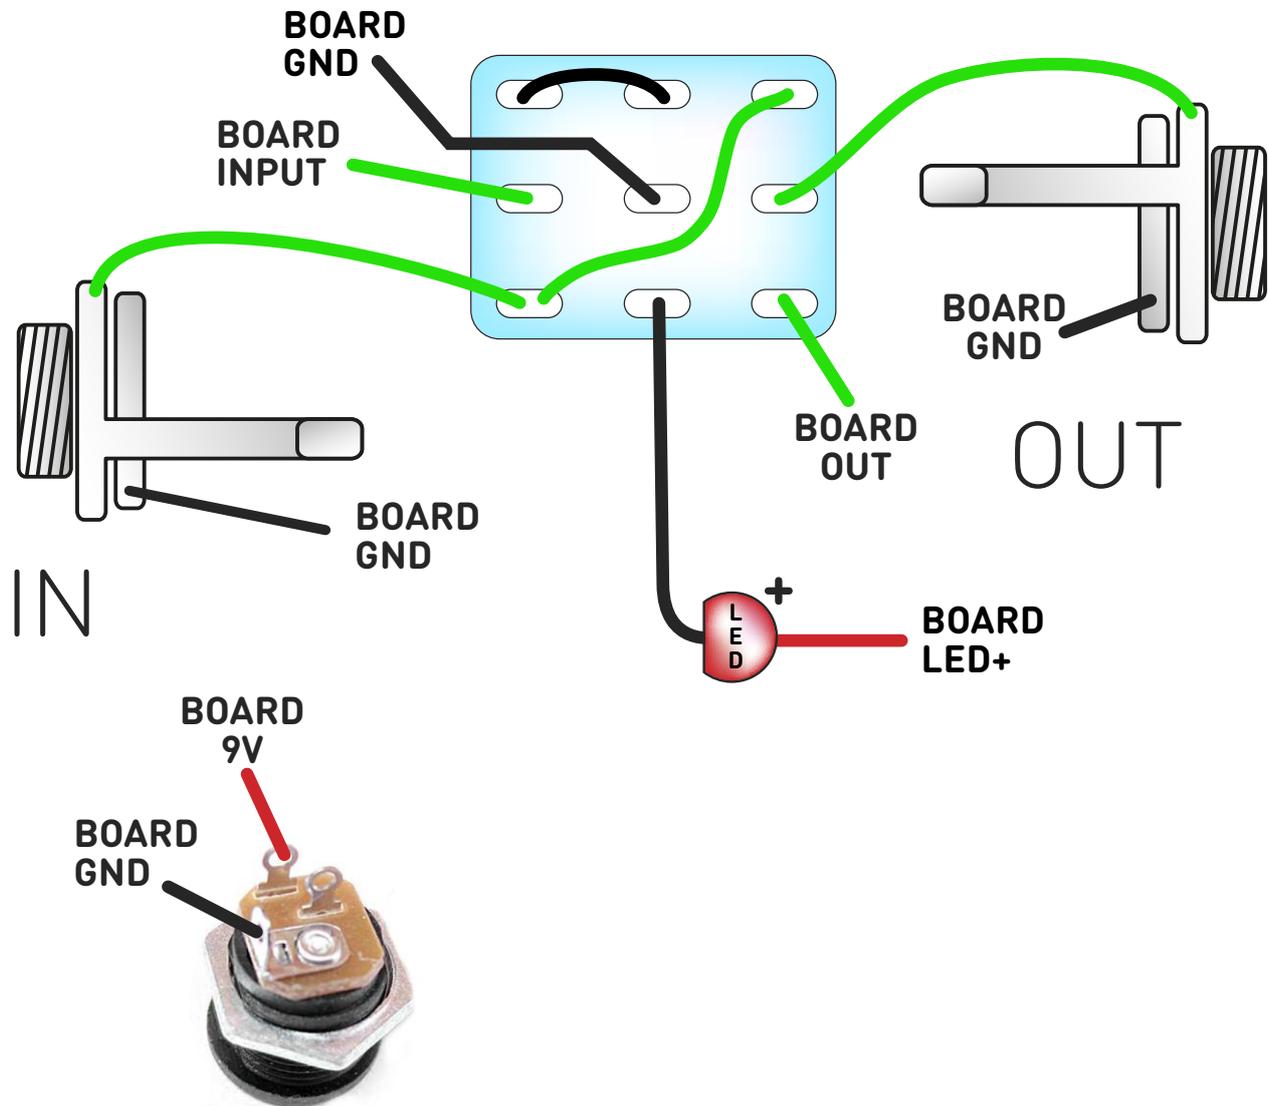


This circuit is standard, Negative GND. Your power supply should be Tip Negative / Sleeve Positive. That's the same as your standard pedals (Boss etc), and you can safely daisy-chain your supply to this pedal.

The BOARD GND connections don't all have to connect to one point. They can be daisy-chained around the circuit, using larger connection points (such as jack socket lugs) for multiple connections. As long as they all connect together in some way.

Wire it up - with battery

(if using a daughterboard please refer to the relevant document)

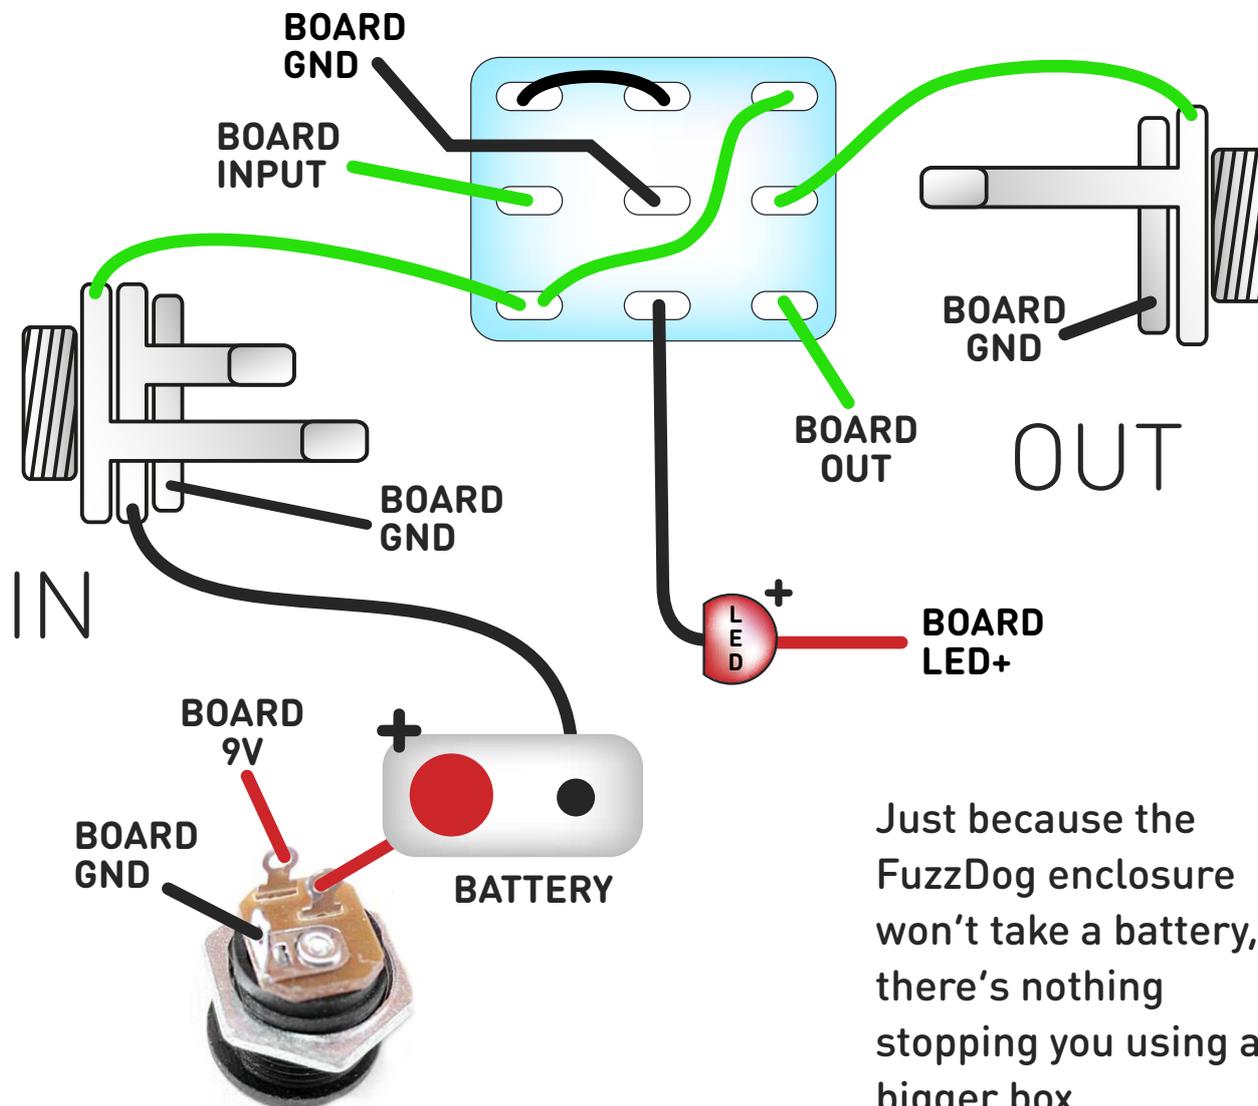

This circuit is standard, Negative GND. Your power supply should be Tip Negative / Sleeve Positive. That's the same as your standard pedals (Boss etc), and you can safely daisy-chain your supply to this pedal.

The BOARD GND connections don't all have to connect to one point. They can be daisy-chained around the circuit, using larger connection points (such as jack socket lugs) for multiple connections. As long as they all connect together in some way.

Drilling template

Stinky Cheese


Hammond 1590B

60 x 111 x 31mm

Recommended drill sizes:

Pots	7mm
Jacks	10mm
Footswitch	12mm
DC Socket	12mm
Rotary Switch	9mm

It's a good idea to drill the holes for the pots 8mm to give yourself some wiggle room unless you're a drill ninja

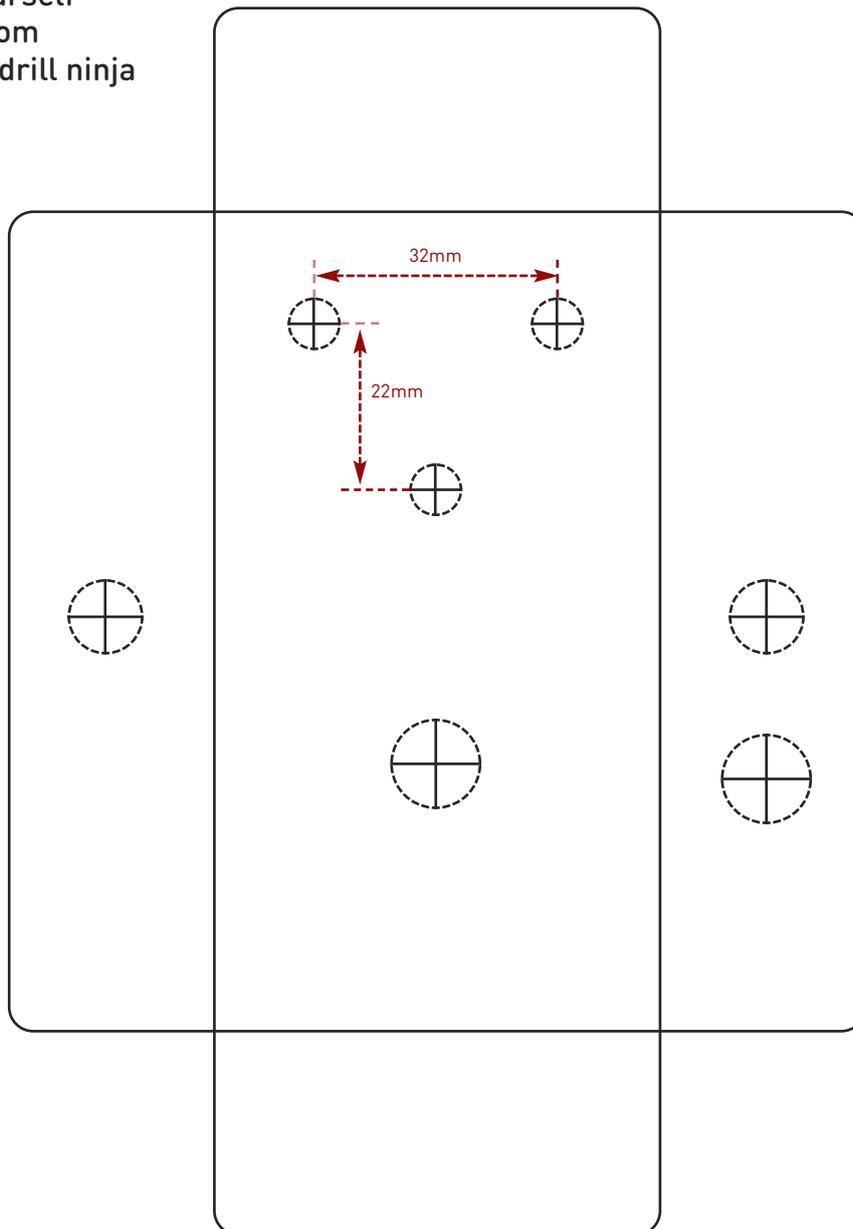

This template is a rough guide only. You should ensure correct marking of your enclosure before drilling. You use this template at your own risk. Pedal Parts Ltd can accept no responsibility for incorrect drilling of enclosures.

FuzzDog.co.uk